

# 1 Meg Memory Card for Nintendo® 64

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 1 Meg Memory Card provides 492 pages for memory storage and is fully compatible with the Nintendo 64 System. The Memory Card has four memory slots for saving games, each with the same capacity as a standard memory pak (123 pages), so its memory is four times larger than a standard card. It works with any game that supports the "Save to Memory Pak" option and comes with a protective storage case.


## USING THE MEMORY CARD

To insert the Memory Card, slide the card into the socket on the underside of the controller until it clicks into position.

To remove it, press the release lever on the controller and pull it out.

## CHANGING SLOTS

To change memory slots, simply slide the switch to 1, 2, 3, or 4.

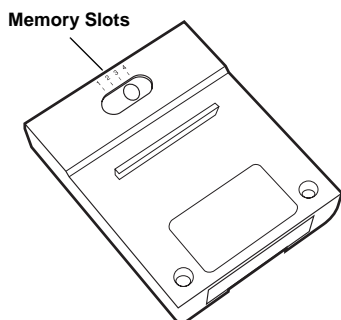

You can change memory slots at any time, but we suggest changing only when the system power is turned off. Some games, such as *Wayne Gretzky 3D Hockey™*, save auto-

matically when you enter the memory manager screen. When playing these types of games, if you change the memory slot, the game will re-save on the new slot, duplicating the information you have already saved on the previous slot. This will not happen if you change slots when the power is off.

For quick and easy access, we suggest you keep a reference list of the games you save on each slot.

## CARE

- Do not remove the Memory Card while recording information.
- Do not touch the Memory Card's front connectors. Keep the front connectors clean and dry.
- Do not leave the Memory Card in humid areas or expose to high temperatures.

Modifying or tampering with the Memory Card's internal components can cause a malfunction and might invalidate its warranty. If your Memory Card is not performing as it should, take it to your local RadioShack store for assistance.

## THE FCC WANTS YOU TO KNOW

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **RadioShack®**  
www.radioshack.com™

© 2000 Tandy Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by Tandy Corporation.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

26-617  
03A00  
Printed in Hong Kong